


## 2. MAINTENANCE

### AIR CLEANER


Remove the seat.

Remove the clips attaching the air cleaner cover and remove the cover.

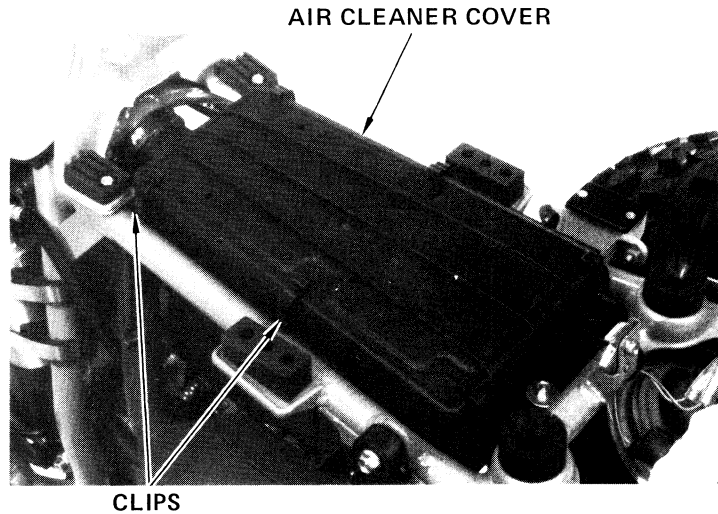

Loosen the connecting tube band screw. Remove the element holding bracket screw and element.

Remove the element from the holder. Refer to page 2-5 for cleaning and reoiling instructions.

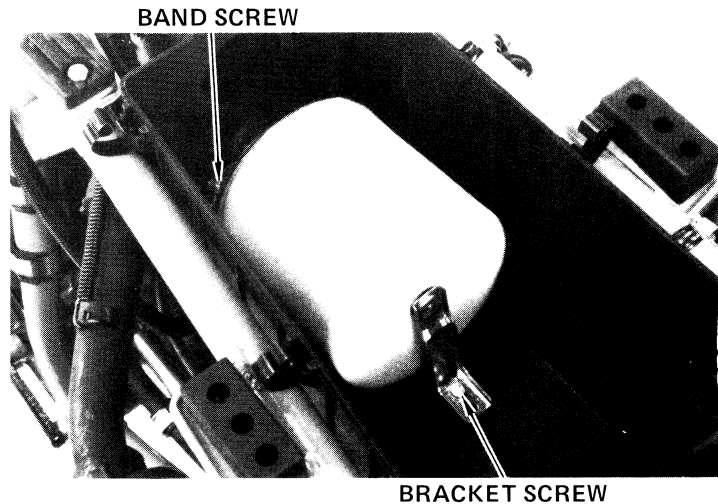

### THROTTLE OPERATION

Check for smooth throttle lever full opening and automatic full closing in all steering positions. Make sure there is no deterioration, damage or kinking in the throttle cable. Replace any damaged parts.

Disconnect the throttle cable at the upper end. Thoroughly lubricate the cable and pivot point with a commercially available cable lubricant to prevent premature wear.

