




Install the throttle cable in the reverse order of removal.

Make sure the throttle lever free play is 3–8 mm (1/8–1/4 in) at the tip of the throttle lever.

Adjust as follows:

Adjust the throttle lever free play by loosening the lock nut and turning the adjuster.

Tighten the lock nut after adjusting.

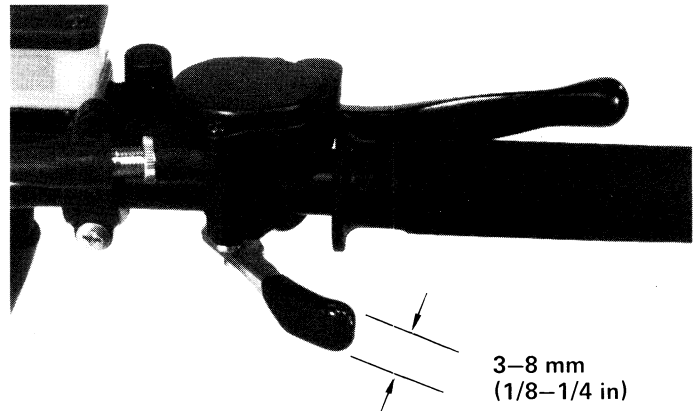

## DRIVE CHAIN

Check the chain slack midway between the sprockets.

**Standard: 25–35 mm (1–1½ in)**


Adjustment:

Loosen the two lock bolts.

Turn the adjuster to decrease or increase chain slack using the tool provided in the tool kit. Then tighten the lock nuts.

NOTE:

If drive chain slack is excessive when the adjuster is moved to the limit of adjustment, the drive chain is worn and must be replaced.

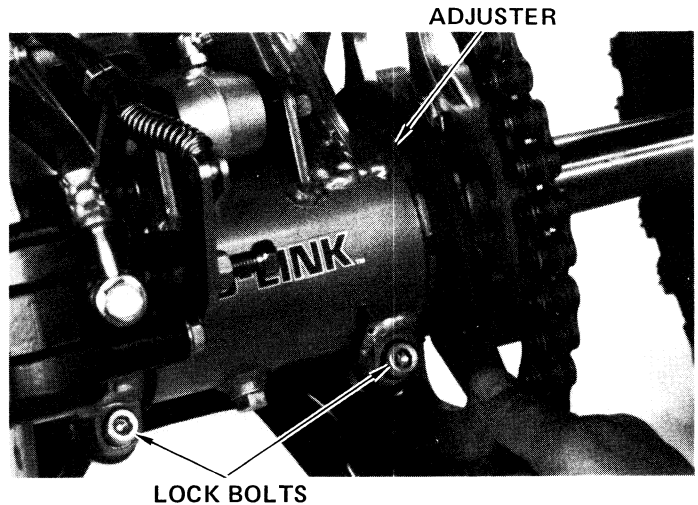

## DRIVE CHAIN SLIDER

Check the drive chain slider for wear or damage.

Replace the slider if the depth of the groove exceeds 2.0 mm (0.8 in).

