

## **REAR SUSPENSION**

Push the rear of the motorcycle up and down to check for proper operation.

Check that the shock rod is not bent and that oil is not leaking from the seal or hose fittings.

Check that the shock link and shock arm are not damaged.

Move the rear wheels sideways to check for play in the swing arm that would indicate worn bearings.