



3. FUEL SYSTEM

FUEL TANK

Remove the seat/rear fender.

Turn the fuel valve OFF, and disconnect the fuel tube.

Remove the fuel tank bracket mounting bolts and fuel tank.

WARNING

Gasoline is extremely flammable. Keep gasoline away from flames or sparks. Wipe up spilled gasoline at once.

Check that fuel flows freely out of the fuel valve. If the flow is restricted, clean the fuel strainer.

Install the fuel tank and bracket and connect the fuel tube.

Install the seat/rear fender.

NOTE:

- After assembly, make sure there are no fuel leaks.
- Do not overtighten the fuel valve lock nut.

