


HEADLIGHT

HEADLIGHT CASE REMOVAL

Remove the two headlight mounting screws and headlight. Disconnect the headlight coupler.

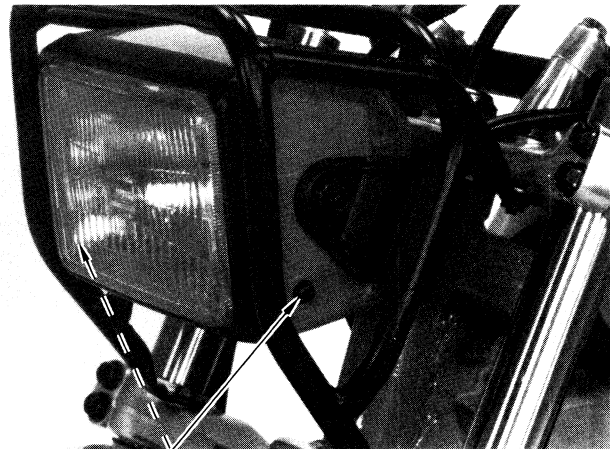

SCREWS

Remove the wire bands.

Remove the headlight case mounting bolts and headlight case.

Install the headlight case in the reverse order of removal.



MOUNTING BOLTS

HEADLIGHT DISASSEMBLY/ASSEMBLY

Disassemble the headlight as shown.

