




Install a dust seal onto the steering stem and press the lower bearing inner race over the stem with the special tool.

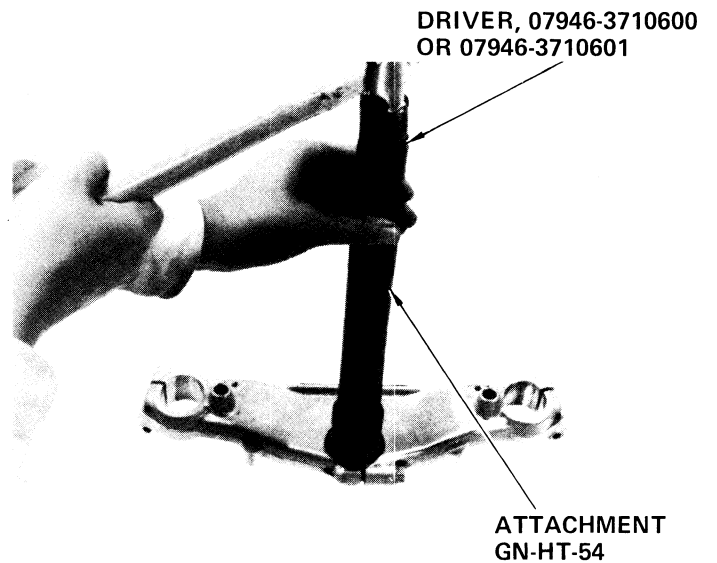

Install and tighten the adjustment nut.

TORQUE: 25–35 N·m (2.5–3.5 kg-m, 18–25 ft-lb)

Turn the steering stem lock-to-lock 2–3 times to seat the bearing. Then loosen and retighten the adjusting nut.

**TORQUE: 5.5–6.5 N·m (0.55–0.65 kg-m,
4–5 ft-lb)**

**STEERING STEM SOCKET
07916-3710100**

