



NEW

Press in new inner bushings so their collars seat against the swing arm.

NOTE:

The inner bushings must be installed before the outer bushings.

Support the inside of the swing arm with the special collar before installing the outer bushings. Turn the special collar over so the hollow side faces down.


Press in the outer bushings so their collars seat against the swing arm.

INSTALLATION

Place the swing arm into the frame and install the pivot bolt. Install the nut and torque it.


**TORQUE: 70-110 N·m (7.0-11.0 kg·m,
51-80 ft·lb)**

DRIVER, 07949-0010000 ATTACHMENT, 32 x 35 mm
07746-0010100

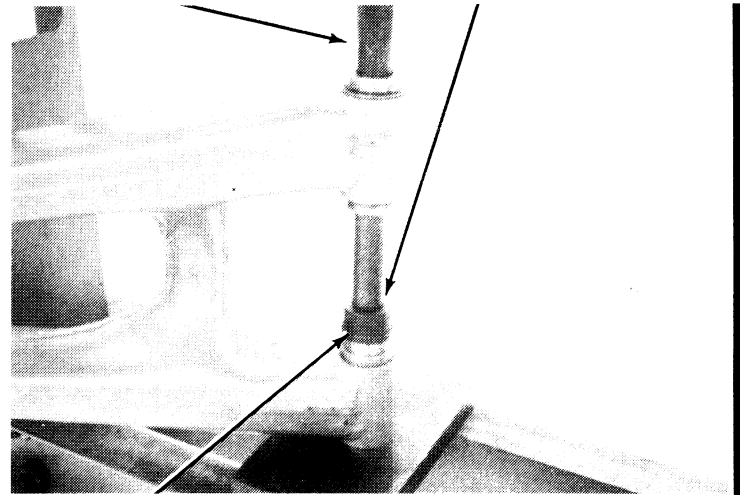

PILOT, 22 mm 07746-0041000

DRIVER 07749-0010000 ATTACHMENT, 32 x 35 mm
07746-0010100

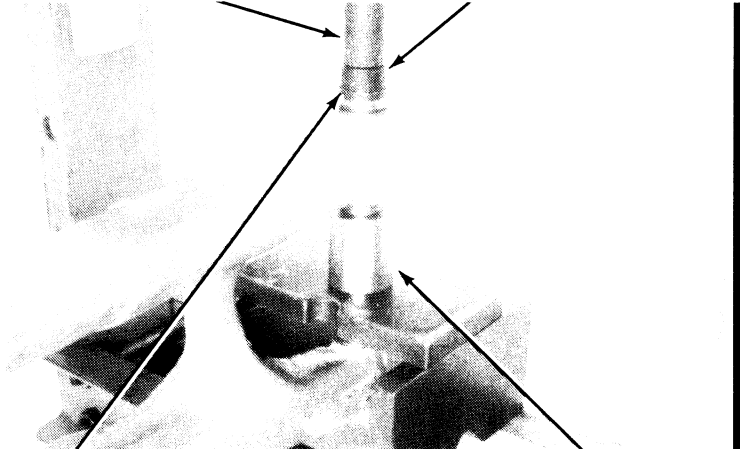


PILOT, 22 mm
07746-0041000

SPECIAL COLLAR
07965-964000A
(U.S.A. ONLY)

NEW

NEW

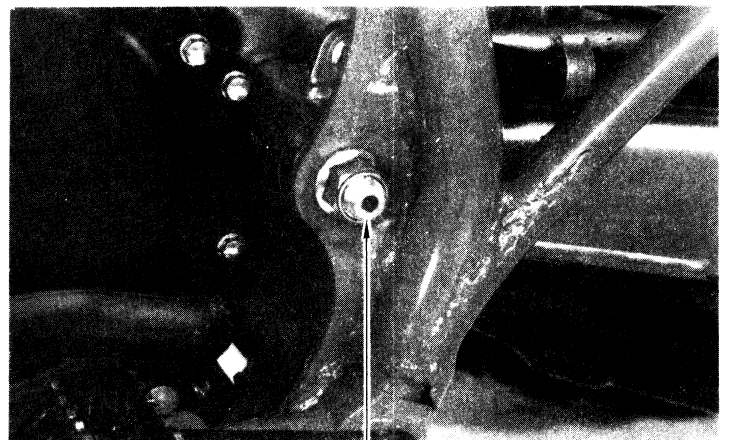

NUT