




Loosen the connecting tube band screw. Remove the element holding bracket screw and element.

Remove the element from the holder. Refer to page 2-5 for cleaning and reoiling instructions.

BAND SCREW

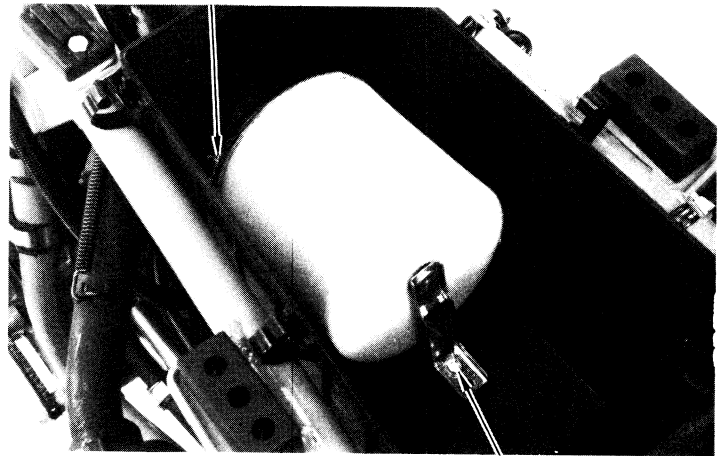


BRACKET SCREW

THROTTLE OPERATION

Check for smooth throttle lever full opening and automatic full closing in all steering positions. Make sure there is no deterioration, damage or kinking in the throttle cable. Replace any damaged parts.

Disconnect the throttle cable at the upper end. Thoroughly lubricate the cable and pivot point with a commercially available cable lubricant to prevent premature wear.

GREASE

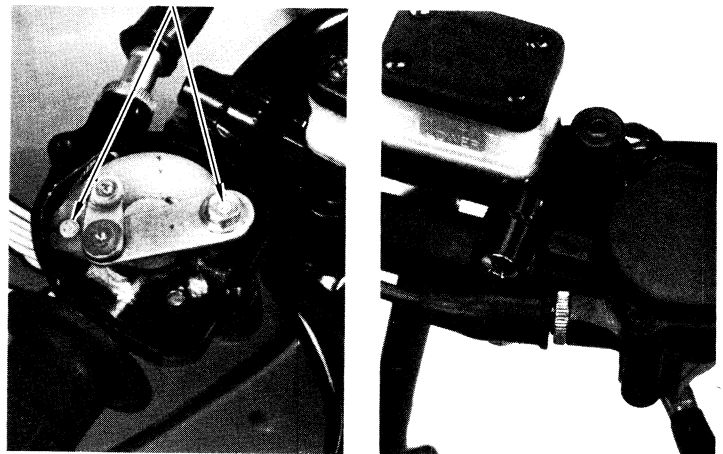

Install the throttle cable in the reverse order of removal.

Make sure the throttle lever free play is 3–8 mm (1/8–1/4 in) at the tip of the throttle lever.

Adjust as follows:

Adjust the throttle lever free play by loosening the lock nut and turning the adjuster.

Tighten the lock nut after adjusting.

