

SKID PLATE, GUARD PLATE

After '86:

Skid and guard plates protect the engine and final drive from pebbles and stones. Check the plates for cracks, damage or looseness at intervals shown in the Maintenance Schedule.

Replace the plates with new ones if they are cracked or damaged.

If the plate bolts are loose, tighten them securely.

