



## RIGHT CRANKCASE COVER REMOVAL

Drain the oil from the engine.  
Shift the transmission to neutral.  
Remove the kick starter and right foot peg.

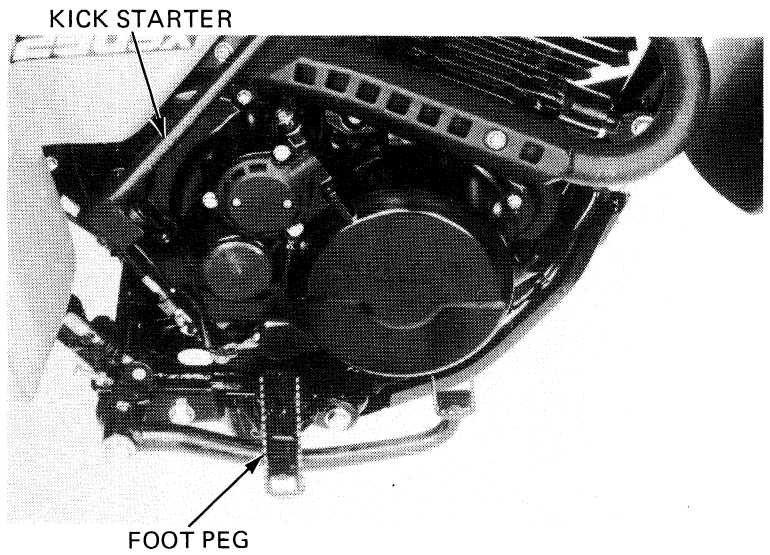

Remove the cable holder and cable holder arm with bolts.

Remove the neutral/reverse switch wire cover and disconnect the wire from the switches.

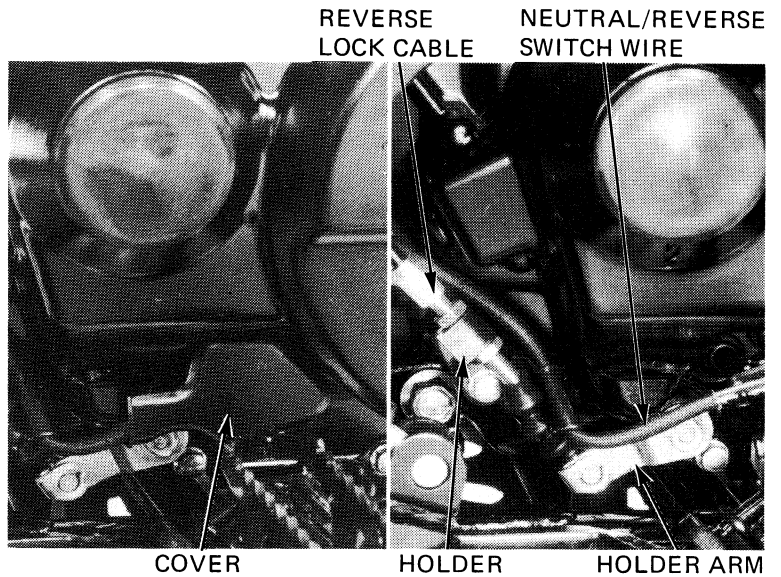

Remove the oil bolt, and two sealing washers from the right crankcase cover.

### NOTE

New sealing washers are required when never the oil bolt is removed.

Remove the oil cap/dipstick.  
Remove the right crankcase cover bolts and the cover.

