


CRANKCASE/CRANKSHAFT/TRANSMISSION


Remove the thrust washer and C1 gear from the countershaft.

Remove the thrust washer and reverse idler gear.

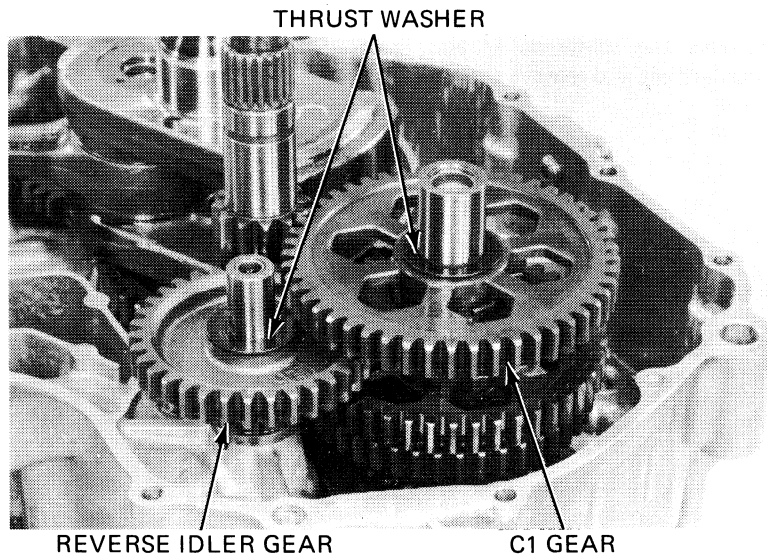

Remove the C1 busing, spline collar, C1 reverse shifter and CR gear from the countershaft.

Remove the reverse idler gear bushing and washer.

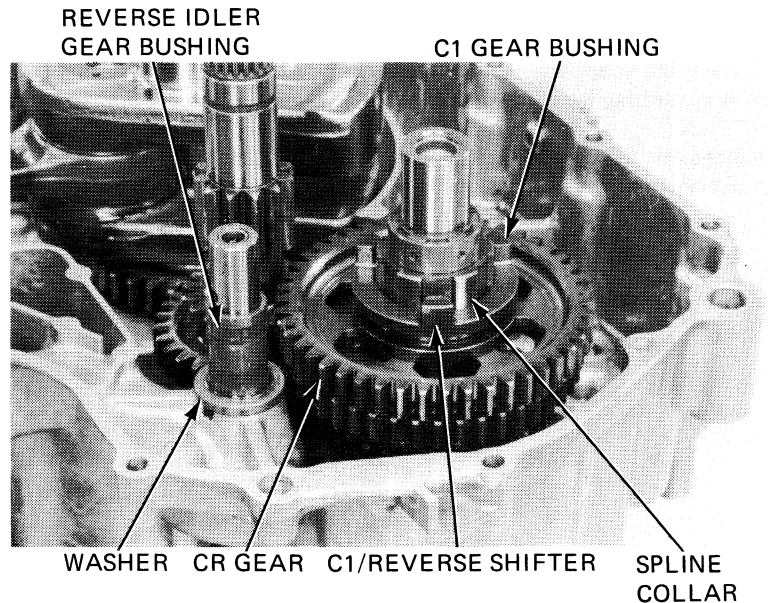

Remove the CR/C2 gear bushing and C2 gear from the countershaft.

Remove the reverse idler gear shaft.

