

## FRONT WHEEL/BRAKE/SUSPENSION/STEERING

### BEARING INSPECTION


Turn the inner race of each bearing with your finger. The bearings should turn smoothly and quietly. Also check that the bearing outer race fits tightly in the hub.

Remove and discard the bearings if the races do not turn smoothly, quietly, or if they fit loosely in the hub.

#### NOTE:


Replace hub bearings in pairs.

For replacement of bearings, see page 11-8 and 11-9.

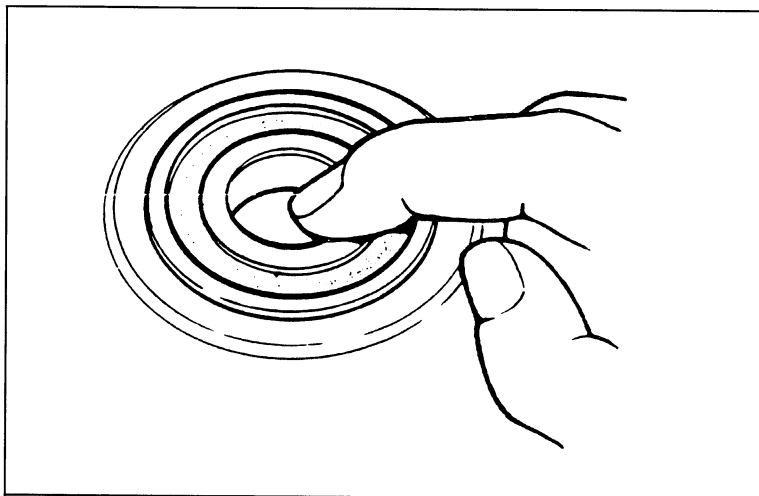

### FRONT WHEEL DISASSEMBLY

Remove the wheel nuts and wheel rim from the hub.

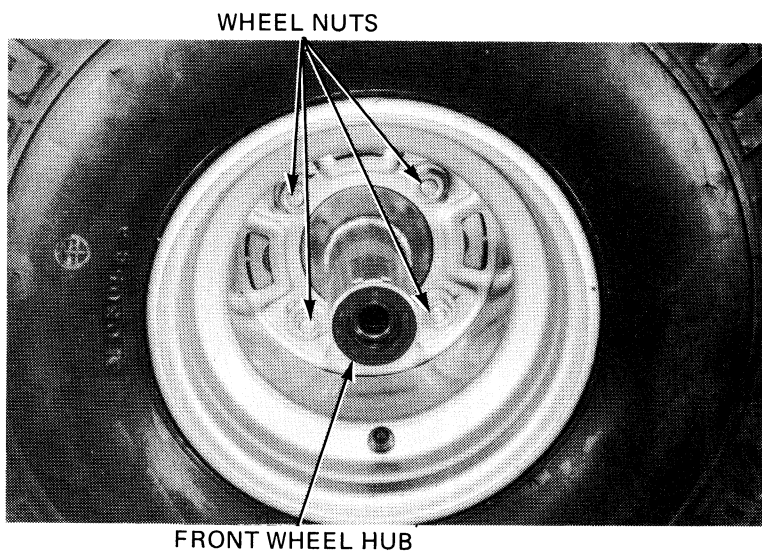

Remove the two screws attaching the brake drum to the wheel hub and the drum from the hub.

