


## LIGHTS/SWITCHES

---

### HEADLIGHT


#### BULB REPLACEMENT

Remove the headlight case mount bolt and bands.

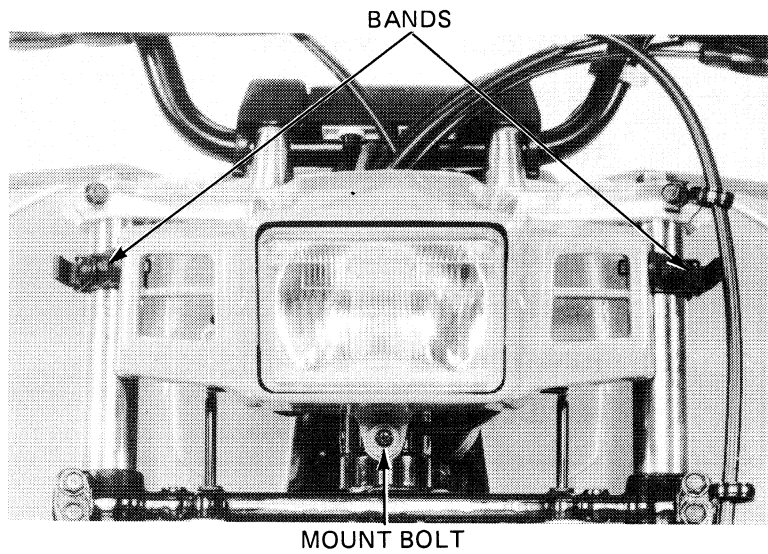

Disconnect the headlight coupler.  
Remove the dust cover from the headlight.  
Remove the retainer clip and replace the headlight bulb with a new one.

Install in the reverse order of removal.

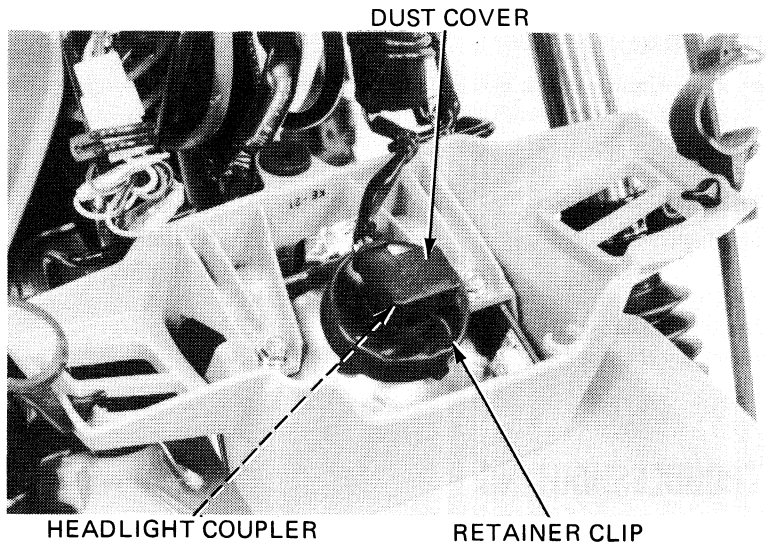

#### HEADLIGHT AND ADJUSTMENT

Turn the headlight adjusting screw to make a vertical beam adjustment.

