

LIGHTS/SWITCHES


INDICATOR LAMP

BULB REPLACEMENT

Pull the bulb socket out of the indicator light housing.

Remove the bulb by pulling it out.

Install a new bulb and push the socket into the housing.

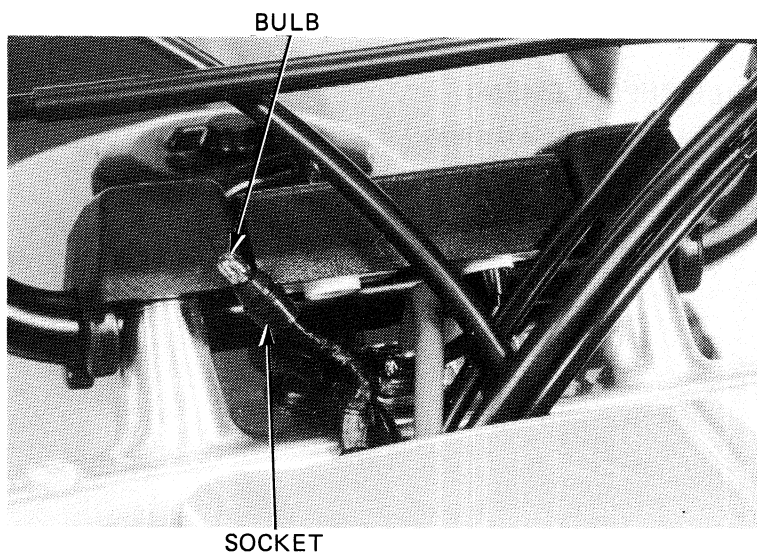

NEUTRAL SWITCH/REVERSE SWITCH


Remove the switch connectors from the switches. Check the continuity between the switch terminal and ground.

The neutral switch is functional if continuity exists with the transmission in neutral.

The reverse switch is functional if continuity exists with the transmission in reverse.

WARNING

Connect the neutral (Light green/red) and reverse (Green) switch wires properly. If the switch wire connections are interchanged, the neutral indicator comes on in the transmission in reverse and the ATC will reverse suddenly.

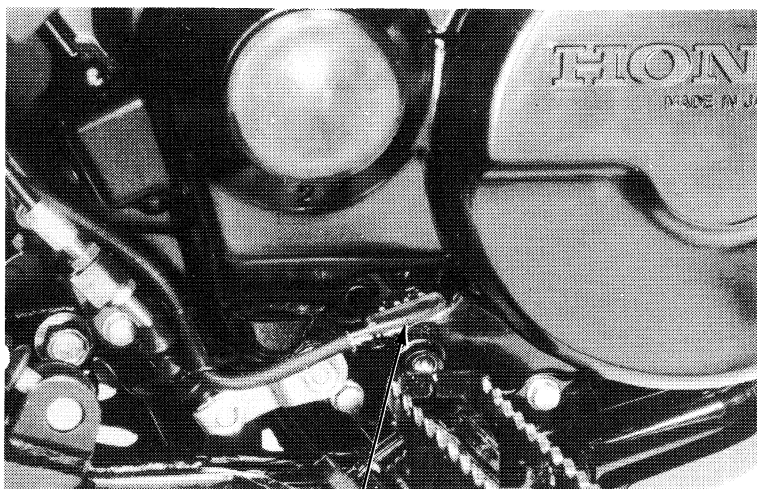

SWITCH CONNECTORS

IGNITION SWITCH

Remove the headlight.

Disconnect the ignition switch wire coupler and connectors.

Check the switch for continuity between the black/white and green wires with the switch "OFF", and the red and black with the switch "ON".

	IG	E	BAT	HO
OFF	○—○			
ON			○—○	
COLOR	BI/W	G	R	BI

