

CYLINDER HEAD/VALVES

ROCKER ARM/SHAFT INSPECTION

Inspect the rocker arms and shafts for wear or damage.

NOTE

- If any rocker arm requires servicing or replacement, inspect the cam lobes for scoring, chipping or flat spots.

Measure the I.D. of each rocker arm.

SERVICE LIMIT: 12.038 mm (0.4739 in)

Measure the O.D. of each rocker arm shaft.



SERVICE LIMIT: 11.92 mm (0.469 in)

Calculate rocker arm-to-shaft clearance.


SERVICE LIMIT: 0.068 mm (0.0027 in)

CAM CHAIN TENSIONER LIFTER DISASSEMBLY

Remove the two bolts attaching the cam chain tensioner lifter and the lifter

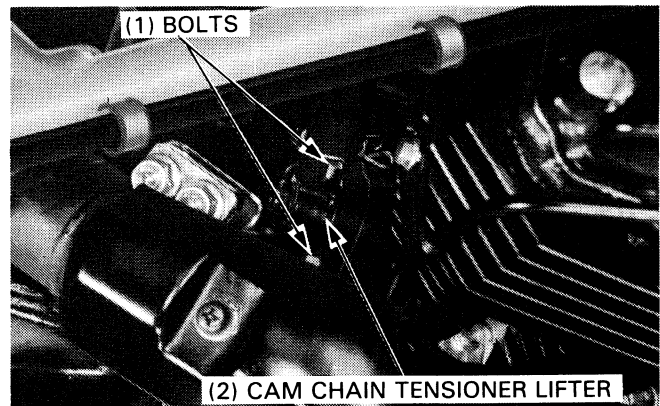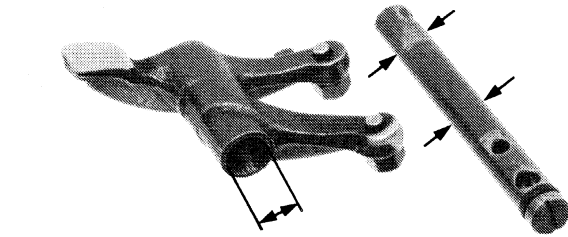

Remove the two screws assembling the cam chain tensioner lifter and disassemble the lifter.

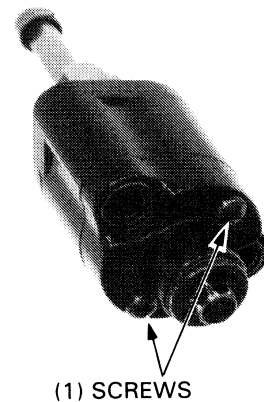

INSPECTION

Check all tensioner lifter parts for wear or damage and replace if necessary.

