


CLUTCH/OIL PUMP/KICK STARTER


Hook the end of the spring to the spring pin.

Align the cut-out in the lifter arm shaft with the lifter piece hole in the cover and install the lifter piece into the hole.

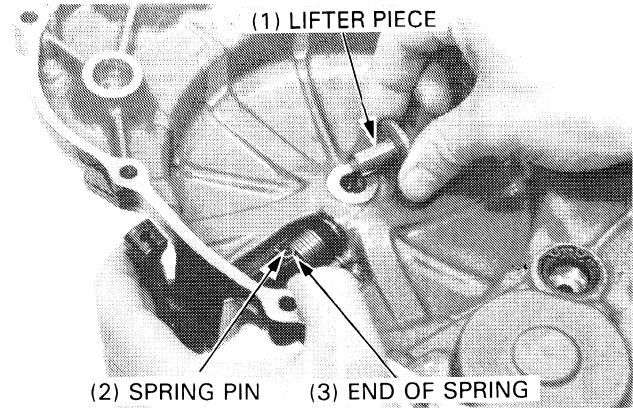


INSTALLATION

Install the dowel pins and a new gasket.

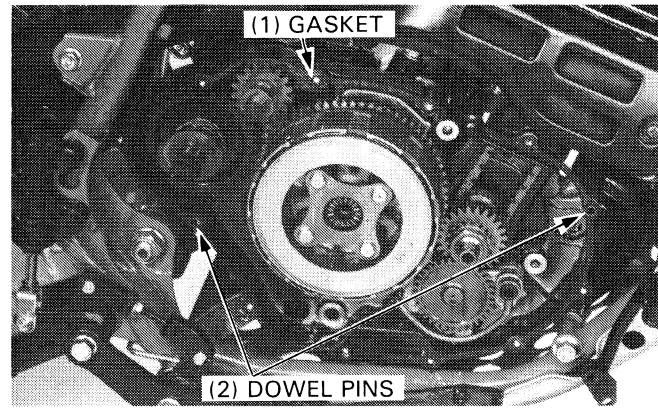

Turn the cam follower shaft arm clockwise to align the cam follower with the cam and install the right crankcase cover.

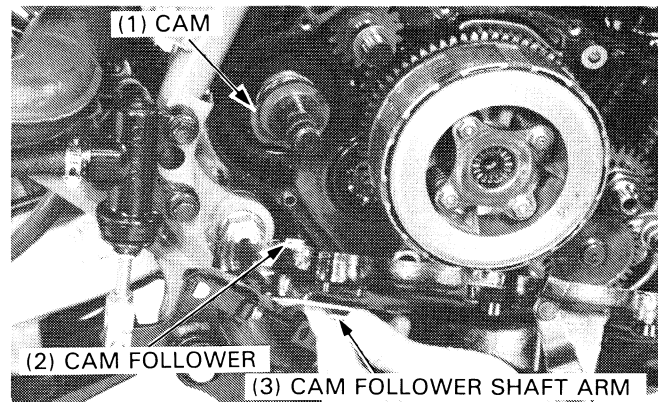

Tighten the cover bolts in a crisscross pattern in 2 or 3 steps.

