


## REAR WHEEL BEARINGS

### BEARING HOLDER REMOVAL


Remove the rear wheels and axle (page 12-3).

Remove the snap ring and the brake caliper mounting plate.

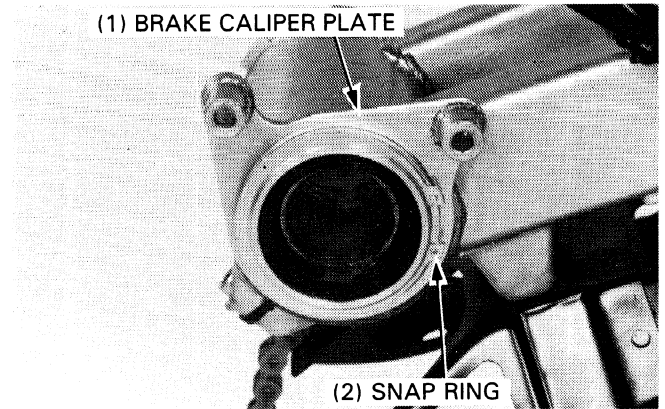


#### After '85:

Remove the snap ring and brake caliper mounting plate. If necessary, remove the snap ring and collar from the stud on the swing-arm.

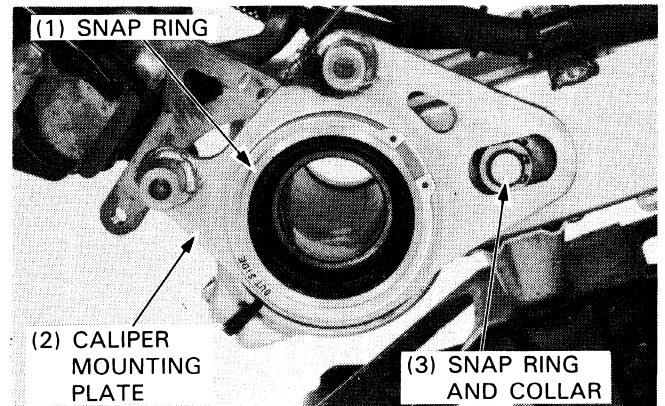

Remove the two socket bolts and rubber seals from the swing arm.

Remove the stopper bolt.

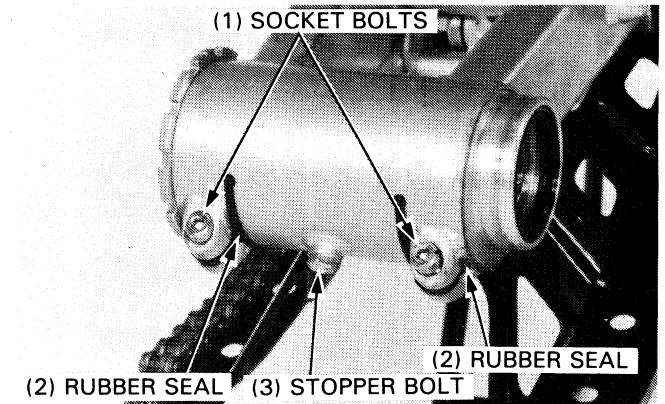

Remove the bearing holder from the swing arm.  
Remove the O-rings from the bearing holder.

