

# 18. INDEX

Ac Regulator .....	16-7	General Information .....	1-1
Air Cleaner .....	3-4	Handlebar .....	11-3
Case .....	4-4	High Altitude Adjustment .....	4-12
Case Breather .....	3-4	Hydraulic Brakes .....	14-1
Alternator/Gearshift Linkage .....	9-1	Ignition System .....	16-3
Alternator .....	9-3	Timing .....	3-8
Brake Disc .....	14-10	Kick Starter .....	8-14
Fluid .....	3-13	Left Crankcase Cover Installation .....	9-8
Fluid Replacement/Bleeding .....	14-3	Removal .....	9-2
Pad Replacement .....	14-6	Lights .....	16-5
Pads .....	3-12	Lubrication .....	2-1
System .....	3-13	Points .....	2-4
Cable & Harness Routing .....	1-9	Maintenance .....	3-1
Cam Chain Tensioner .....	6-11	Schedules .....	3-2
Lifter Assembly .....	6-15	Model Identification .....	1-2
Lifter Disassembly .....	6-4	Noise Emission Control System (U.S.A. Only) .....	1-13
Camshaft Installation .....	6-14	Nuts, Bolts, Fasteners .....	3-17
Removal .....	6-5	Oil Cooler .....	2-3
Carburetor Choke .....	4-6	Filter Screen Cleaning .....	8-6
Installation .....	4-11	Pump .....	8-10
Removal .....	4-5	Pilot Screw Adjustment .....	4-11
Carburetor-Idle Speed .....	3-6	Piston Installation .....	7-5
Clutch/Oil Pump/Kick Starter .....	8-1	Removal .....	7-3
Clutch .....	3-16, 8-6	Primary Drive Gear .....	8-13
Crankcase/Transmission/Crankshaft .....	10-1	Rear Fender/Seat .....	15-1
Crankcase Assembly .....	10-14	Rear Suspension .....	13-1
Breather .....	3-5	Wheels .....	12-1
Separation .....	10-4	Axle .....	12-3
Crankshaft .....	10-11	Brake Pedal .....	14-23
Cylinder Head/Valves .....	6-1	Brake Pivots .....	3-15
Cylinder/Piston .....	7-1	Caliper .....	14-14
Cylinder Compression .....	3-9	Fender/Seat/Exhaust System .....	15-1
Head Assembly .....	6-12	Master Cylinder .....	14-21
Cylinder Head Cover Assembly/Installation .....	6-17	Wheel .....	12-3
Removal Disassembly .....	6-3	Wheel Bearings .....	12-9
Cylinder Head Disassembly .....	6-7	Right Crankcase Cover Installation .....	8-19
Installation .....	6-13	Removal .....	8-3
Removal .....	6-6	Service Information	
Cylinder Installation .....	7-6	Alternator/Gearshift Linkage .....	9-1
Removal .....	7-2	Clutch/Oil Pump/Kick Starter .....	8-1
Drive Chain .....	3-10	Crankcase/Transmission/Crankshaft .....	10-1
Slider .....	3-11	Cylinder Head/Valves .....	6-1
Electrical System .....	16-1	Cylinder/Piston .....	7-1
General Safety .....	1-1	Electrical System .....	16-1
Engine Removal/Installation .....	5-1	Engine Removal/Installation .....	5-1
Installation .....	5-3	Front Wheel/Suspension/Steering .....	11-1
Oil & Filter Change .....	2-2	Fuel System .....	4-1
Oil Level .....	2-2	Hydraulic Brakes .....	14-1
Removal .....	5-2	Lubrication .....	2-1
Exhaust System .....	15-2	Maintenance .....	3-1
Float Chamber .....	4-7	Rear Fender/Seat/Exhaust System .....	15-1
Front Wheel/Suspension/Steering .....	11-1	Rear Suspension .....	13-1
Front Caliper .....	14-11	Rear Wheels .....	12-1
Fork .....	11-14	Service Rules .....	1-1
Master Cylinder .....	14-19	Shock Absorber .....	13-3
Wheel .....	11-6	Spark Arrester .....	3-16
Fuel System .....	4-1	Plug .....	3-5
Line .....	3-7	Specifications .....	1-3
Strainer Cleaning .....	4-3	Steering Head Bearings .....	3-18
Strainer Screen .....	3-7	Stem .....	11-21
Tank .....	4-3	Suspension .....	3-11
Gearshift Linkage .....	9-4	Swing Arm .....	13-10