




# Indicators


If one of these indicators does not come on when it should, have your dealer check for problems.

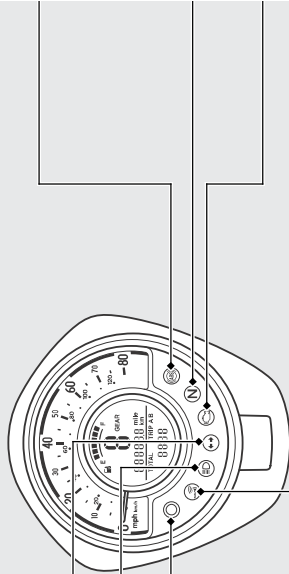

 Turn signal indicator

 High beam indicator

Alarm indicator  
Anti-theft Alarm System: 

 Honda SMART Key indicator

Comes on when vehicle and Honda SMART Key verification is complete, and the ignition switch can be operated. Goes off when the ignition switch is turned to the ON position.

When the Honda SMART Key Indicator Flashes: 