


## Battery

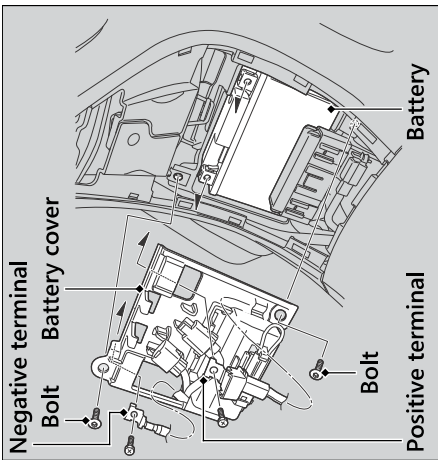

## Removal

Make sure the ignition switch is in the OFF position.

1. Remove the center cover. ➔ P. 78
2. Remove the couplers from the battery cover.
3. Move the battery cover upward by removing the bolts.
4. Disconnect the negative  $\ominus$  terminal from the battery.
5. Disconnect the positive  $\oplus$  terminal from the battery.
6. Remove the battery cover.
7. Remove the battery taking care not to drop the terminal nuts.