


3. Place your motorcycle on its center stand on a firm, level surface.
4. Place a drain pan under the drain bolt.
5. Remove the oil fill cap, drain bolt and sealing washer to drain the oil.
  - Discard the oil at an approved recycling center.

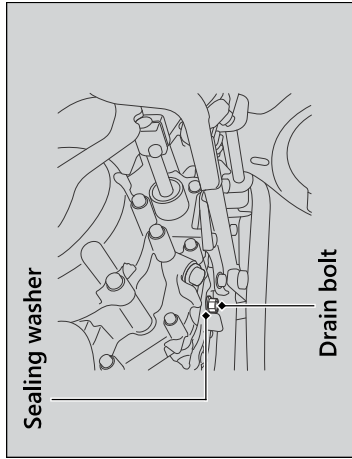

6. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

**Torque:** 18 lbf·ft (24 N·m, 2.4 kgf·m)

7. Fill the crankcase with the recommended oil (► P. 67, ► P. 144) and install the oil fill cap.

**Required oil**

**When changing oil:**

0.8 US qt (0.8 L)

8. Check the oil level. ► P. 81
9. Check that there are no oil leaks.