


Instruments

Speedometer

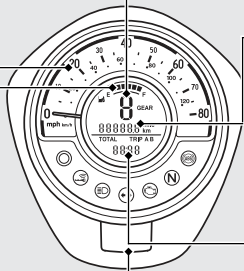

Gear position indicator

The gear position is shown in the gear position indicator.

- ▶ "-" appears when the transmission was not shifted properly.

Odometer [TOTAL]/Tripmeter [TRIP A/B]

Mode button switches between the odometer and the tripmeter.

- Odometer: Total distance ridden.
- Tripmeter: Distance ridden since tripmeter was reset.
 - ▶ To reset tripmeter, press and hold mode button to reset to 0.0 km/mile.

Clock (12-hour display)

To set the clock: ➡ P.22

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing approximately:

0.26 US gal (1.0 L)

If the fuel gauge indicator flashes in a repeat pattern or turns off: ➡ P.106

Display Check

When the ignition switch is turned to the ON position, the speedometer needle swings to the maximum scale on the dial once, all the mode and digital segments will show. If any part of the display does not come on when it should, have your dealer check for problems.