


## Honda SMART Key System *(Continued)*

### Switching the ignition switch

#### To Unlock the Ignition Switch

- 1 Make sure that the Honda SMART Key is activated. **➡P.30**
- 2 To authenticate the Honda SMART Key system, push the ignition switch.
  - ▶ When properly authenticated and the ignition switch is unlocked, the buzzer rings 2 times, the Honda SMART Key indicator and ignition switch ring come on.
  - ▶ The buzzer sound can be cancelled. **➡P.36**
- 3 Turn the ignition switch to the ON position while the Honda SMART Key indicator comes on.
  - ▶ If you do not turn the ignition switch to the ON position within 20 seconds after pushing in the ignition switch in, the Honda SMART Key indicator and ignition switch ring will go off, the turn signals flash 1 time, and then the ignition switch will be locked.

#### When the Honda SMART Key system does not work properly **➡P.107**

If someone without the Honda SMART Key tries to turn the ignition switch, the ignition switch rotates freely. If you notice the ignition switch is in a different position, turn the ignition switch to the original OFF or  (Lock) position.

