

Anti-theft Alarm System *(Continued)*

Adjusting the Sensitivity of Anti-theft Alarm System

You can select from 3 sensitivity levels for the anti-theft alarm system.

- 1 Remove the center cover. ➔ **P.78**
- 2 Make sure that the Honda SMART Key system is active. ➔ **P.30**
- 3 Push the ignition switch to authenticate the Honda SMART Key system. ➔ **P.34**
- 4 Connect the EM mode coupler provided on the battery cover to the EM mode connector. ➔ **P.109**
 - ▶ The Honda SMART Key indicator and ignition switch ring go off.

Alarm button



Ignition switch



Ignition switch ring

- 5 Push the ignition switch 1 time.
- 6 Repeat the following 3 times:
 - ▶ Press the alarm button on the Honda SMART Key 2 times and the ignition switch 1 time.
 - ▶ When the alarm button is pressed, the Honda SMART Key LED comes on. Make sure the LED goes off before pressing the button again.
 - ▶ If the alarm button or ignition switch is not pressed for 1 minute, the Honda SMART Key indicator starts blinking and this mode will be cancelled. If so, remove the EM mode coupler, return to 3 and follow the procedure again.