

Installation

Install the parts in the reverse order of removal. Always connect the positive ⊕ terminal first. Make sure that bolts and nuts are tight.

Make sure the clock information is correct after the battery is reconnected. ➤ P. 22

The anti-theft alarm system will be deactivated if the battery is disconnected. The system will remain off when the battery is reconnected.

To activate the system, turn the ignition switch to the ON position once.

To activate the system, see "Setting the Anti-theft Alarm System." ➤ P. 38

For proper handling of the battery, see "Maintenance Fundamentals." ➤ P. 64

"Battery Goes Dead." ➤ P. 117