
Removing & Installing Body Components ► Center Cover

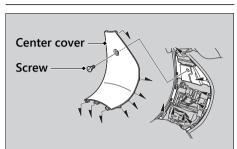

Center Cover

Removal

Remove the center cover by removing the screw.

Installation

- 1. Open the left and right body covers slightly, then install the center cover while aligning each tab and slit.
- 2. Install and tighten the screw.