


■ Rear Wheel

Removal

1. Support your vehicle securely and raise the rear wheel off the ground using the center stand or a hoist.
2. Remove the chain covers. ► P. 92
3. Remove the rear brake adjusting nut.
4. Disconnect the brake rod from the brake arm.
5. Disconnect the brake stopper arm from the brake panel by removing the cotter pin, brake stopper arm nut, washer and rubber grommet.
6. Remove the rear axle nut and washer, then loosen the drive chain lock nuts and drive chain adjusting nuts.

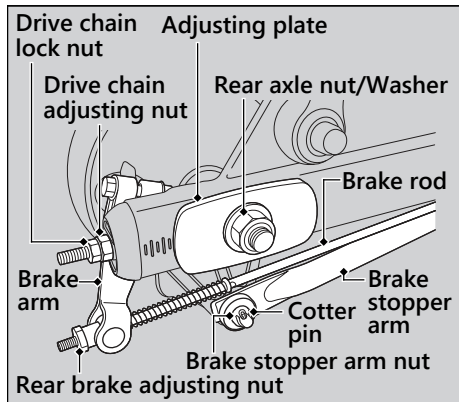

7. Remove the rear axle shaft, chain adjusting plates and side collars, then remove the drive chain from the driven sprocket by pushing the rear wheel forward.
8. Remove the rear wheel from the swingarm.