

Parts Location

Rear brake fluid reservoir ➡ P.66

Battery ➡ P.56

Air cleaner ➡ P.64

Front brake fluid reservoir
➡ P.66

Front brake lever ➡ P.76

Throttle grip ➡ P.74

Engine oil fill cap ➡ P.60

Engine oil filter ➡ P.62

Engine oil inspection window
➡ P.60

Rear brake pedal

Rear suspension spring
preload adjuster ➡ P.78

