



### Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing: approximately 0.92 US gal (3.5 liters).



### Fuel Gauge Failure Indication

If the fuel system has an error, the fuel gauge indicators will continue flashing or turn off completely. If this occurs, see your dealer as soon as possible.

### Display Check

When the ignition switch is turned on, all the mode and digital segments will show. If any part of the display does not come on when it should, see your dealer.