

- 5 Press **B** button until the desired minute is displayed.
- ▶ Press and hold to advance the minute fast.



- 6 Press **A** button. The clock is set, and then the display moves to the changing of the mileage unit.
- ▶ The setting can also be set by turning the ignition switch off.
  - ▶ The display will stop flashing automatically and the setting will be cancelled if the button is not pressed for about 30 seconds.