


## Main Fuse & FI Fuse

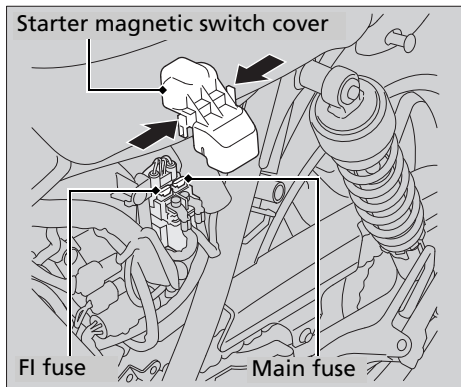

1. Remove the left side cover. ► P. 54
2. Remove the starter magnetic switch cover.
3. Using the fuse puller provided in the tool kit (► P. 32), pull the main fuse and FI fuse out one by one and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
  - Spare fuses are provided in the fuse box. ► P. 97
4. Reinstall parts in the reverse order of removal.

### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.