

Changing Spark Plug

For the recommended spark plugs, see “Specifications.” ➤ P. 135


Use only the recommended type of spark plugs in the recommended heat range.

NOTICE

Using a spark plug with an improper heat range can cause engine damage.

1. Disconnect the spark plug caps from the spark plugs.
2. Clean any dirt from around the spark plug bases.
3. Remove the spark plugs using the spark plug wrench provided in the tool kit.

Spark plug cap

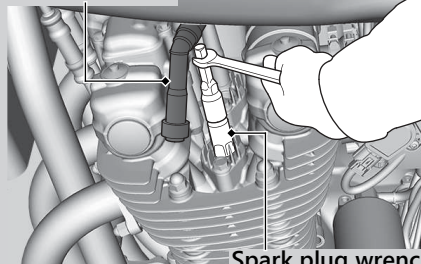

Spark plug wrench

4. Install the new spark plugs. With the plug washers attached, thread the spark plugs in by hand to prevent cross-threading.