


Instruments *(Continued)*

INFO 2 display

You can select the following:

- Current fuel mileage
- Average fuel mileage
- Fuel consumption
- Average speed
- Elapsed time
- Reserve fuel consumption

When the 1st (E) segment of the fuel gauge starts flashing, the current fuel mileage, average fuel mileage, fuel consumption, average speed or elapsed time switch to the reserve fuel consumption.

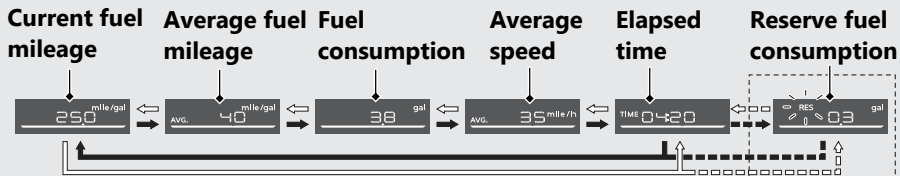

- Press the **SEL** ▲ (up) button
 ⇨ Press the **SEL** ▼ (down) button

Changing the INFO 2 display

- 1 Select the INFO 2 display. → **P.23**
- 2 Press the **SEL** ▲ (up) or the **SEL** ▼ (down) button until the desired indication is displayed.
- 3 Press the **MODE** button. The INFO 2 display is set, and then the display moves to the riding mode display.

When the 1st (E) segment of the fuel gauge starts flashing