

Current fuel mileage

Displays the current or instant fuel mileage.

Display range: 0.0 to 300.0 mile/gal (L/100km or km/L)

- When your speed is less than 3 mph (5 km/h): "----." is displayed.
- More than 300.0 L/100km: "----." is displayed.

When "----." is displayed except for the above-mentioned cases, go to your dealer for service.

Average fuel mileage

Displays the average fuel mileage since the selected tripmeter was reset.

The average fuel mileage will be calculated based on value displayed on the tripmeter (A or B) selected. Also, the average fuel mileage for tripmeter A will be displayed when the odometer is selected on INFO 1 display.

Display range: 0.0 to 300.0 mile/gal (L/100km or km/L)

- More than 300.0 L/100km: "----." is displayed.
- Initial display: "----." is displayed.
- When the tripmeter A or B is reset: "----." is displayed.

When "----." is displayed except for the above-mentioned cases, go to your dealer for service.

To reset the average fuel mileage: ➡ P.26