

### P level (Engine output level)

P level has three setting levels.

Available setting range: Low to High



**Low**



**Middle**



**High**

- ▶ High has the most power.
- ▶ Low has the least power.

### T level (Torque control level)

T level has three setting levels or can be turned off.

Available setting range: Low to High, or Off



**Off**



**Low**



**Middle**



**High**

- ▶ Low is the minimum Torque Control level
- ▶ High is the maximum Torque Control level.

- ▶ Off deactivates the Torque Control.

### EB level (Engine brake level)

EB level has three setting levels.

Available setting range: Low to High



**Low**



**Middle**



**High**

- ▶ High has the strongest engine braking effect.
- ▶ Low has the weakest engine braking effect.