

4 Changing the coolant temperature gauge unit:

- 1 Press RESET button to select “°F” (Fahrenheit) or “°C” (Centigrade).
- 2 To end the selection, press SET button.

The established setting can also be set by press and hold SET button and RESET button for more than 2 seconds, or turning the ignition switch to OFF.

The control is automatically switched from the setting mode to the ordinary display if the button is not pressed for about 30 seconds. Even in this case, established setting is maintained.