

## Rebound Damping

You can adjust the rebound damping by turning the adjuster to suit the load or the road surface.

Turn clockwise to increase rebound damping (hard), or turn counterclockwise to decrease rebound damping (soft). The standard position is approximately 1 1/2 turns from the maximum setting so that the punch mark on the adjuster aligns with the reference punch mark.

