

## Adjusting the Front Suspension

### Spring Preload

You can adjust the spring preload by turning the adjuster to suit the load or the road surface.

Turn clockwise to increase spring preload (hard), or turn counterclockwise to decrease spring preload (soft). The standard position is the 8 turns from the minimum setting.

