

## Engine Oil ► Changing Engine Oil & Filter

8. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
9. Install the new oil filter and tighten.

**Torque:** 19 lbf·ft (26 N·m, 2.7 kgf·m).

10. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

**Torque:** 22 lbf·ft (30 N·m, 3.1 kgf·m).

11. Fill the crankcase with the recommended oil (►P. 46) and install the oil fill cap.

### **Required oil**

#### **When changing oil & engine oil filter:**

3.2 US qt (3.0 liters)

#### **When changing oil only:**

2.9 US qt (2.7 liters)

12. Check the oil level. ►P. 59
13. Check that there are no oil leaks.
14. Install the parts in the reverse order of removal.