


## Adjusting the Rear Suspension

Adjusting the suspension requires a pin spanner. We recommend that you have your motorcycle serviced by your dealer.

### Spring Preload

You can adjust the spring preload by the adjuster to suit the load or the road surface. Use the cloth and pin spanner to turn the adjuster. Position 1 to 2 are for a decrease spring preload (soft), or turn the position 4 to 10 increase spring preload (hard). The standard position is 3.

Attempting to adjust directly from 1 to 10 or 10 to 1 may damage the shock absorber.

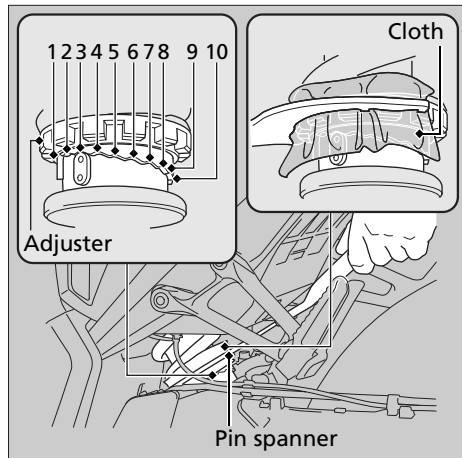

#### NOTICE

The rear shock absorber damper unit contains high pressure nitrogen gas. Do not attempt to disassemble, service, or improperly dispose of the damper. See your dealer.