

Left Shroud

Removal

1. Remove the front seat. 2 P. 51
2. Remove the bolts A and bolt B.

3. Release the tabs from the grommets.
 - u Be careful not to apply weight to the left shroud.

Installation

Install the parts in the reverse order of removal.

