 


- 5 Press the **SEL** button until the desired minute is displayed.
- ▶ Press and hold the **SEL** button to advance the minute fast.



- 6 Press the **SET** button. The clock is set, and then the display moves to the changing of the speed and mileage unit.
- ▶ The adjustment can also be set by turning the ignition switch to the OFF position.

2 Changing of the speed and mileage unit:

- 1 After clock setting, the speed and mileage unit start flashing.
- 2 Press the **SEL** button to select either "km/h" and "km" or "mph" and "mile".
- 3 Press the **SET** button. The speed and mileage unit is set, and then the display returns to the ordinary display.
 - ▶ The adjustment can also be set by turning the ignition switch to the OFF position.

