

Left Shroud

Removal

1. Remove the front seat. ▶ P. 55
2. Remove the bolts A and bolt B.

3. Release the tabs from the grommets.
 - ▶ Be careful not to apply weight to the left shroud.

Installation

Install the parts in the reverse order of removal.

