

## Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ➤ P. 42

### ■ Fuse Box Fuses

1. Remove the front seat. ➤ P. 55
2. Open the fuse box cover.
3. Pull out the fuses one by one to check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Close the fuse box cover.
5. Reinstall parts in the reverse order of removal.

