
## **Switches**

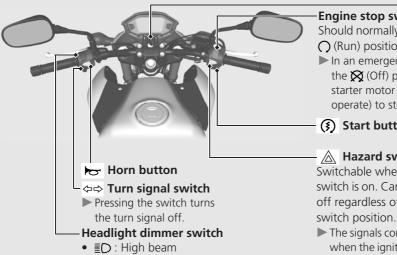

• **夏**D : Low beam

## **Engine stop switch**

Should normally remain in the (Run) position.

In an emergency, switch to the X (Off) position (the starter motor will not operate) to stop the engine.

Start button

## Mazard switch

Switchable when the ignition switch is on. Can be turned to off regardless of the ignition

► The signals continue flashing when the ignition switch is in the OFF or LOCK position after the hazard switch is on.