
Switches

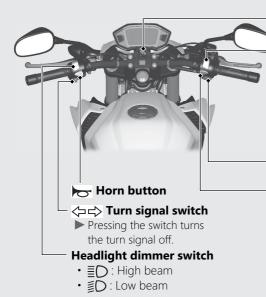

Engine stop switch

Should normally remain in the \bigcap (Run) position.

► In an emergency, switch to the

(Off) position (the starter motor will not operate) to stop the engine.

Start button

Switchable when the ignition switch is in the ON position. Can be turned to off regardless of the ignition switch position.

► The signals continue flashing when the ignition switch is in the OFF or LOCK position after the hazard switch is on.