

Maintenance

Please read "Importance of Maintenance" and "Maintenance Fundamentals" carefully before attempting any maintenance. Refer to "Specifications" for service data.

An optional larger tool kit may be available.

Check with your Honda dealer's parts department.

| | | | |
|---|-------|-------------------------------------|-------|
| Importance of Maintenance | P. 41 | Drive Chain | P. 76 |
| Maintenance Schedule | P. 43 | Clutch | P. 80 |
| Maintenance Fundamentals | P. 46 | Throttle | P. 83 |
| Removing & Installing Body Components .. | P. 60 | Crankcase Breather | P. 84 |
| Battery | P. 60 | Other Adjustments | P. 85 |
| Clip | P. 61 | Adjusting the Headlight Aim | P. 85 |
| Front Seat | P. 62 | Adjusting the Brake Lever | P. 86 |
| Rear Seat | P. 63 | Adjusting the Front Suspension..... | P. 87 |
| Right Side Cover | P. 64 | Adjusting the Rear Suspension | P. 88 |
| Engine Oil | P. 65 | | |
| Air Cleaner | P. 69 | | |
| Coolant | P. 70 | | |
| Brakes | P. 72 | | |
| Side Stand | P. 75 | | |