



7. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
8. Install the new oil filter and tighten.

Torque: 19 lbf·ft (26 N·m, 2.7 kgf·m)

9. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 22 lbf·ft (30 N·m, 3.1 kgf·m)

10. Fill the crankcase with the recommended oil (2 P. 52, 2 P. 130) and install the oil fill cap.

Required oil

When changing oil & engine oil filter:

2.9 US qt (2.7 L)

When changing oil only:

2.6 US qt (2.5 L)

11. Check the oil level. 2 P. 65
12. Check that there are no oil leaks.