

### Starter Motor Operates But Engine Does Not Start

---


Check the following items:

- Check the correct engine starting sequence. **2 P. 35**
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
  - u If the indicator lamp is on, contact your dealer as soon as possible.

### Starter Motor Does Not Operate

---

Check the following items:

- Check the correct engine starting sequence. **2 P. 35**
- Make sure engine stop switch is in the  (Run) position. **2 P. 32**
- Check for a blown fuse. **2 P. 105**
- Check for a loose battery connection (**2 P. 60**) or battery terminal corrosion (**2 P. 49**).
- Check the condition of the battery. **2 P. 102**

If the problem continues, have your motorcycle inspected by your dealer.