


Adjusting the Windscreen Height

You can adjust the windscreen height 2 positions.

1. Remove the upper side caps.

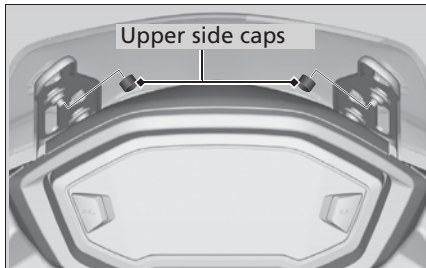

2. Remove the windscreen by removing the screws, and the washers A.

